

FLUID CAPACITIES

COOLING SYSTEM	QUARTS	LITERS	POWER STEERING	PINTS	LITERS
3.9L ENGINE	15.1	14.3	ALL	2.7	1.28
5.2L ENGINE (2WD)	17.0	16.1	REAR AXLE	PINTS	LITERS
5.2L ENGINE (4WD)	16.5	15.6	CHRYSLER 8¼ Inch (210 mm)	4.4	2.08
5.9L ENGINE (2WD)	15.5	14.7	CHRYSLER 9¼ Inch (235 mm)	4.5	2.13
5.9L ENGINE (4WD)	15.0	14.2	DANA 60	6.0	2.84
5.9L DIESEL ENGINE (MAN. TRANS.)	15.5	14.7	DANA 70	7.0	3.31
5.9L DIESEL ENGINE (AUTO. TRANS)	16.5	15.6	FRONT AXLE	PINTS	LITERS
ENGINE CRANKCASE	QUARTS	LITERS	DANA 44 FBJ	5.6	2.65
3.9L, 5.2L & 5.9 ENGINES	4.0*	3.8*	DANA 60 F	6.5	3.07
5.9L DIESEL ENGINES	12.0*	11.4**	TRANSMISSION-AUTOMATIC	QUARTS	LITERS
FUEL TANK	GALLON	LITERS	A 727 (5.9L ENGINE)	8.4	7.9
STANDARD 3.9L & 5.2L ENGINES	22.0	83.0	A 998 (3.9L ENGINE)	8.6	8.1
OPTIONAL 3.9L & 5.2L ENGINES	30.0	113.0	A 999 (5.2L ENGINE)	8.6	8.1
5.9L ENGINE (G OR D)	30.0	113.0	A 518 (5.2L & 5.9L ENGINES)	10.2	9.6
AD100 & AW100	34.0	128.0	TRANSMISSION-MANUAL	QUARTS	LITERS
TRANSFER CASE	PINTS	LITERS	NV 4500	4.0	3.8
NP-205	4.5	2.13	GETRAG 360 (5 Speed)	3.5	3.3
NP-241	6.0	2.84			

* Add 0.5 qt. or 0.45 liter when the oil filter is changed

** Add 1 qt. or 0.9 liter with oil filter change

J9200-86

STARTING ASSISTANCE (JUMP STARTING)

WARNING: DO NOT ATTEMPT TO PUSH OR TOW A VEHICLE TO START THE ENGINE. UNBURNED FUEL COULD ENTER CATALYTIC CONVERTER AND IGNITE AFTER THE ENGINE IS STARTED. THIS COULD CAUSE THE CONVERTER TO OVERHEAT AND RUPTURE.

BOOSTER BATTERY

WARNING: TO PREVENT PERSONAL INJURY OR, DO NOT ALLOW BATTERY ACID TO CONTACT EYES, SKIN OR CLOTHING. DO NOT LEAN OVER A BATTERY WHEN CONNECTING JUMPER CABLES. DO NOT ALLOW THE POSITIVE AND NEGATIVE CABLE CLAMPS TO CONTACT EACH OTHER. KEEP OPEN FLAMES AND SPARKS AWAY FROM THE BATTERY ELECTROLYTE VENT HOLES. ALWAYS WEAR EYE PROTECTION WHEN INVOLVED WITH VEHICLE BATTERIES.

If it becomes necessary to use a booster battery and jumper cables to start an engine, use the following procedure.

(1) Engage the parking brake. Shift the automatic transmission to PARK (if a manual transmission, shift to NEUTRAL).

(2) Turn off all lights, and all other electrical loads.

(3) Observe the battery condition indicator (Fig. 5). If the battery condition indicator is light/bright colored (or yellow), replace the battery. **Do not attempt to jump start an engine when the condition indicator is light/bright colored (or yellow).** If the condition indicator is dark in the center (but without a green dot), proceed with connecting the jumper cables.

WARNING: THE ELECTROLYTE (ACID) IN A DISCHARGED BATTERY CAN FREEZE. DO NOT ATTEMPT TO JUMP START AN ENGINE BEFORE DETERMINING THE CONDITION OF THE BATTERY ELECTROLYTE. THE BATTERY COULD EXPLODE AND CAUSE SEVERE PERSONAL INJURY.

CAUTION: Do not permit the metal surfaces on the vehicles to contact. This could establish ground (negative) continuity between the vehicle bodies. This could cause the on-board computers to be damaged. In addition it could reduce the amount of current flow through the starter motor.