

If the bolts are not damaged, their "free length" should be measured using the cap screw stretch gauge provided with the replacement head gasket. Place the head of the bolt against the base of the slot and align the bolt with the straight edge of gauge. If the end of the bolt touches the foot of the gauge, the bolt must be discarded. The maximum bolt free length is 132.1 mm (5.200 in.).