

## **MAINTENANCE SCHEDULES - 24-VALVE CUMMINS TURBO DIESEL**

There are two maintenance schedules that show the **required** service for your vehicle.

First is Schedule **“B”**. It is for vehicles that are operated under the conditions that are listed below and at the beginning of the schedule.

- Frequent short trips where the engine does not achieve full operating temperature (operating temperature defined as 190° F (66° C ) coolant temperature).
- Extensive engine idling (over 10 minutes per hour of operation) at ambient temperatures less than 32° F (0° C).
- Driving in dusty conditions.
- Frequent trailer towing.
- Taxi, police, or delivery service (commercial service).
- Off-road or desert operation.
- Extensive operation at high engine speeds (greater than 2900 rpm) and loads (greater than 70% throttle).

**NOTE:** Most vehicles are operated under the conditions listed for Schedule "B".

Second is Schedule **“A”**. It is for vehicles that are not operated under any of the conditions listed under Schedule "B".

Use the schedule that best describes your driving conditions. Where time and mileage are listed, follow the interval that occurs first.

- CAUTION:**
- Failure to perform the required maintenance items may result in damage to the vehicle.
  - Proper operation of four-wheel drive vehicles depends on tires of equal size, type and circumference on each wheel. Any difference in tire size can cause damage to the transfer case. Tire rotation schedule should be followed to balance tire wear.
- 
- Check the engine oil level about 15 minutes after a fully warmed engine is shut off. Checking the oil level while the vehicle is on level ground will improve the accuracy of the oil level reading. Add oil only when the level is at or below the ADD or MIN mark.
  - Check the windshield washer solvent and add if required.
  - Drain water from the fuel filter.
  
  - Check tire pressure and look for unusual wear or damage.
  - Inspect the batteries and clean and tighten the terminals as required.
  - Check the fluid levels of coolant reservoir, brake master cylinder, and transmission and transfer case (if equipped), add as needed.
  - **Check Filter Minder™. Replace air cleaner filter element if necessary.**
  - Check all lights and all other electrical items for correct operation.
  
  - Change the engine oil filter.
  - Inspect the exhaust system.

- Inspect the brake hoses.
- Inspect the CV joints (if equipped) and front suspension components.
- Check the automatic transmission fluid level.
- Check the manual transmission fluid level.
- Check the coolant level, hoses, and clamps.
- Lubricate outer tie rod ends 2500/3500 (4X4) models only.
- Lubricate Front Drive Shaft Fitting (2500/3500, 4X4).

## Schedule “B”

Follow schedule “B” if you usually operate your vehicle under one or more of the following conditions.

- Frequent short trips where the engine does not achieve full operating temperature (operating temperature defined as 190° F (66° C ) coolant temperature).
- Extensive engine idling (over 10 minutes per hour of operation) at ambient temperatures less than 32° F (0° C).
- Driving in dusty conditions.
- Frequent trailer towing.
- Taxi, police, or delivery service (commercial service).
- Off-road or desert operation.
- Extensive operation at high engine speeds (greater than 2900 rpm) and loads (greater than 70% throttle).

**NOTE:** If **ANY** of these apply to you then change your coolant every 102,000 miles (163 000 km) or 60 months, whichever comes first and follow schedule “B” of the "Maintenance Schedules" section of this manual.

| Miles<br>(Kilometers)  | 3,750<br>(6 000) | 7,500<br>(12 000) | 11,250<br>(18 000) | 15,000<br>(24 000) | 18,750<br>(30 000) |
|--|------------------|-------------------|--------------------|--------------------|--------------------|
| Change engine oil and engine oil filter.                     |                  | X                 |                    | X                  |                    |
| Lubricate Front Drive Shaft Fitting (2500/3500, 4X4).        | X                | X                 | X                  | X                  | X                  |
| Rotate tires.  |                  | X                 |                    | X                  |                    |
| Check spare tire for proper pressure and correct stowage.    |                  | X                 |                    | X                  |                    |
| Lubricate outer tie rod ends 2500/3500 (4X4) models only.    |                  | X                 |                    | X                  |                    |
| Inspect water pump weep hole for blockage.                   |                  |                   |                    | X                  |                    |
| Replace fuel filter element. Clean the water in fuel sensor. |                  |                   |                    | X                  |                    |
| Change rear axle fluid.                                      |                  |                   |                    | X                  |                    |
| Change front axle fluid (4X4).                               |                  |                   |                    | X                  |                    |
| Inspect brake linings.                                       |                  |                   |                    | X                  |                    |
| Inspect and adjust parking brake if necessary.               |                  |                   |                    | X                  |                    |

| Miles<br>(Kilometers)   | 22,500<br>(36 000) | 26,250<br>(42 000) | 30,000<br>(48 000) | 33,750<br>(54 000) | 37,500<br>(60 000) |
|---|--------------------|--------------------|--------------------|--------------------|--------------------|
| Change engine oil and engine oil filter.  | X                  |                    | X                  |                    | X                  |
| Lubricate Front Drive Shaft Fitting (2500/3500, 4X4).                                       | X                  | X                  | X                  | X                  | X                  |
| Rotate tires.   | X                  |                    | X                  |                    | X                  |
| Check spare tire for proper pressure and correct stowage.                                   | X                  |                    | X                  |                    | X                  |
| Lubricate outer tie rod ends 2500/3500 (4X4) models only.                                   | X                  |                    | X                  |                    | X                  |
| Inspect drive belt, replace as required.  | X                  |                    |                    |                    |                    |
| Inspect fan hub.  |                    |                    | X                  |                    |                    |
| Inspect damper.   |                    |                    | X                  |                    |                    |
| Inspect water pump weep hole for blockage.  |                    |                    | X                  |                    |                    |
| Replace fuel filter element. Clean the water in fuel sensor.                                |                    |                    | X                  |                    |                    |
| Change rear axle fluid.   |                    |                    | X                  |                    |                    |
| Change front axle fluid (4X4).  |                    |                    | X                  |                    |                    |
| Check transfer case fluid level (4X4).  |                    |                    | X                  |                    |                    |
| Drain and refill automatic transmission fluid. Replace filter and adjust bands (48RE only). |                    |                    | X                  |                    |                    |

| Miles<br>(Kilometers)  | 41,250<br>(66 000) | 45,000<br>(72 000) | 48,750<br>(78 000) | 52,500<br>(84 000) | 56,250<br>(90 000) |
|--|--------------------|--------------------|--------------------|--------------------|--------------------|
| Change engine oil and engine oil filter.                     |                    | X                  |                    | X                  |                    |
| Lubricate Front Drive Shaft Fitting (2500/3500, 4X4).        | X                  | X                  | X                  | X                  | X                  |
| Rotate tires.  |                    | X                  |                    | X                  |                    |
| Check spare tire for proper pressure and correct stowage.    |                    | X                  |                    | X                  |                    |
| Lubricate outer tie rod ends 2500/3500 (4X4) models only.    |                    | X                  |                    | X                  |                    |
| Inspect drive belt, replace as required.                     |                    | X                  |                    |                    |                    |
| Inspect water pump weep hole for blockage.                   |                    | X                  |                    |                    |                    |
| Replace fuel filter element. Clean the water in fuel sensor. |                    | X                  |                    |                    |                    |
| Inspect brake linings.                                       |                    | X                  |                    |                    |                    |

| Miles<br>(Kilometers)                          | 41,250<br>(66 000) | 45,000<br>(72 000) | 48,750<br>(78 000) | 52,500<br>(84 000) | 56,250<br>(90 000) |
|--|--------------------|--------------------|--------------------|--------------------|--------------------|
| Inspect and adjust parking brake if necessary. |                    | X                  |                    |                    |                    |
| Change rear axle fluid.                        |                    | X                  |                    |                    |                    |
| Change front axle fluid (4X4).                 |                    | X                  |                    |                    |                    |

| Miles<br>(Kilometers)   | 60,000<br>(96 000) | 63,750<br>(102 000) | 67,500<br>(108 000) | 71,250<br>(114 000) | 75,000<br>(120 000) |
|---|--------------------|---------------------|---------------------|---------------------|---------------------|
| Change engine oil and engine oil filter.  | X                  |                     | X                   |                     | X                   |
| Lubricate Front Drive Shaft Fitting (2500/3500, 4X4).   | X                  | X                   | X                   | X                   | X                   |
| Flush and replace engine coolant at 60 months, if not replaced at 102,000 miles (163 000 km). | X                  |                     |                     |                     |                     |
| Rotate tires.   | X                  |                     | X                   |                     | X                   |
| Check spare tire for proper pressure and correct stowage.                                     | X                  |                     | X                   |                     | X                   |
| Lubricate outer tie rod ends 2500/3500 (4X4) models only.                                     | X                  |                     | X                   |                     | X                   |
| Inspect drive belt, replace as required.  |                    |                     | X                   |                     |                     |
| Inspect fan hub.  | X                  |                     |                     |                     |                     |
| Inspect damper.   | X                  |                     |                     |                     |                     |
| Inspect water pump weep hole for blockage.  | X                  |                     |                     |                     | X                   |
| Replace fuel filter element. Clean the water in fuel sensor.                                  | X                  |                     |                     |                     | X                   |
| Inspect front wheel bearings.   | X                  |                     |                     |                     |                     |
| Change rear axle fluid.   | X                  |                     |                     |                     | X                   |
| Change front axle fluid (4X4).  | X                  |                     |                     |                     | X                   |
| Change 6-spd manual transmission (G-56) fluid 2500/3500 models only.                          | X                  |                     |                     |                     |                     |
| Inspect brake linings.  | X                  |                     |                     |                     | X                   |
| Inspect and adjust parking brake if necessary.  | X                  |                     |                     |                     | X                   |
| Drain and refill transfer case fluid (4X4).   | X                  |                     |                     |                     |                     |
| Drain and refill automatic transmission fluid and change main sump filter (545 RFE only).     | X                  |                     |                     |                     |                     |
| Drain and refill automatic transmission fluid. Replace filter and adjust bands (48RE only).   | X                  |                     |                     |                     |                     |

| Miles<br>(Kilometers)   | 78,750<br>(126 000) | 82,500<br>(132 000) | 86,250<br>(138 000) | 90,000<br>(144 000) | 93,750<br>(150 000) |
|---|---------------------|---------------------|---------------------|---------------------|---------------------|
| Change engine oil and engine oil filter.  |                     | X                   |                     | X                   |                     |
| Lubricate Front Drive Shaft Fitting (2500/3500, 4X4).                                       | X                   | X                   | X                   | X                   | X                   |
| Rotate tires.   |                     | X                   |                     | X                   |                     |
| Check spare tire for proper pressure and correct stowage.                                   |                     | X                   |                     | X                   |                     |
| Lubricate outer tie rod ends 2500/3500 (4X4) models only.                                   |                     | X                   |                     | X                   |                     |
| Inspect drive belt, replace as required.  |                     |                     |                     | X                   |                     |
| Change rear axle fluid.   |                     |                     |                     | X                   |                     |
| Change front axle fluid (4X4).  |                     |                     |                     | X                   |                     |
| Check transfer case fluid level (4X4).  |                     |                     |                     | X                   |                     |
| Inspect fan hub.  |                     |                     |                     | X                   |                     |
| Inspect damper.   |                     |                     |                     | X                   |                     |
| Inspect water pump weep hole for blockage.  |                     |                     |                     | X                   |                     |
| Replace fuel filter element. Clean the water in fuel sensor.                                |                     |                     |                     | X                   |                     |
| Inspect front wheel bearings.   |                     |                     |                     | X                   |                     |
| Inspect brake linings.  |                     |                     |                     | X                   |                     |
| Inspect and adjust parking brake if necessary.  |                     |                     |                     | X                   |                     |
| Drain and refill automatic transmission fluid. Replace filter and adjust bands (48RE only). |                     |                     |                     | X                   |                     |

| Miles<br>(Kilometers)   | 97,500<br>(156 000) | 100,000<br>(160 000) | 101,250<br>(162 000) | 105,000<br>(168 000) | 108,750<br>(174 000) | 112,500<br>(180 000) |
|---|---------------------|----------------------|----------------------|----------------------|----------------------|----------------------|
| Change engine oil and engine oil filter.                        | X                   |                      |                      | X                    |                      | X                    |
| Lubricate Front Drive Shaft Fitting (2500/3500, 4X4).           | X                   | X                    | X                    | X                    | X                    | X                    |
| Flush and replace engine coolant, if not replaced at 60 months. |                     |                      | X                    |                      |                      |                      |
| Rotate tires.   | X                   |                      |                      | X                    |                      | X                    |
| Check spare tire for proper pressure and correct stowage.       | X                   |                      |                      | X                    |                      | X                    |

| Miles<br>(Kilometers)  | 97,500<br>(156 000) | 100,000<br>(160 000) | 101,250<br>(162 000) | 105,000<br>(168 000) | 108,750<br>(174 000) | 112,500<br>(180 000) |
|--|---------------------|----------------------|----------------------|----------------------|----------------------|----------------------|
| Lubricate outer tie rod ends 2500/3500 (4X4) models only.    | X                   |                      |                      | X                    |                      | X                    |
| Flush and replace engine coolant.                            |                     | X                    |                      |                      |                      |                      |
| Inspect drive belt, replace as required.                     |                     |                      |                      |                      |                      | X                    |
| Inspect water pump weep hole for blockage.                   |                     |                      |                      | X                    |                      |                      |
| Replace fuel filter element. Clean the water in fuel sensor. |                     |                      |                      | X                    |                      |                      |
| Change rear axle fluid.                                      |                     |                      |                      | X                    |                      |                      |
| Change front axle fluid (4X4).                               |                     |                      |                      | X                    |                      |                      |
| Inspect brake linings.                                       |                     |                      |                      | X                    |                      |                      |
| Inspect and adjust parking brake if necessary.               |                     |                      |                      | X                    |                      |                      |

| Miles<br>(Kilometers)  | 116,250<br>(186 000) | 120,000<br>(192 000) | 123,750<br>(198 000) | 127,500<br>(204 000) | 131,250<br>(210 000) | 135,000<br>(216 000) |
|--|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|
| Change engine oil and engine oil filter.   |                      | X                    |                      | X                    |                      | X                    |
| Lubricate Front Drive Shaft Fitting (2500/3500, 4X4).  | X                    | X                    | X                    | X                    | X                    | X                    |
| Rotate tires.  |                      | X                    |                      | X                    |                      | X                    |
| Check spare tire for proper pressure and correct stowage.                                      |                      | X                    |                      | X                    |                      | X                    |
| Flush and replace engine coolant at 120 months, if not replaced at 102,000 miles (163 000 km). | X                    |                      |                      |                      |                      |                      |
| Lubricate outer tie rod ends 2500/3500 (4X4) models only.                                      |                      | X                    |                      | X                    |                      | X                    |
| Clean engine air filter assembly.  |                      |                      |                      |                      |                      | X                    |
| Adjust valve lash clearance.   |                      |                      |                      |                      |                      | X                    |
| Inspect drive belts, replace as required.  |                      |                      |                      |                      |                      | X                    |
| Drain and refill transfer case fluid (4X4).  |                      | X                    |                      |                      |                      |                      |
| Inspect fan hub.   |                      | X                    |                      |                      |                      |                      |
| Inspect damper.  |                      | X                    |                      |                      |                      |                      |
| Inspect water pump weep hole for blockage.   |                      | X                    |                      |                      |                      | X                    |
| Replace fuel filter element. Clean the water in fuel sensor.                                   |                      | X                    |                      |                      |                      | X                    |

| Miles<br>(Kilometers)   | 116,250<br>(186 000) | 120,000<br>(192 000) | 123,750<br>(198 000) | 127,500<br>(204 000) | 131,250<br>(210 000) | 135,000<br>(216 000) |
|---|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|
| Inspect front wheel bearings.   |                      | X                    |                      |                      |                      |                      |
| Change rear axle fluid.   |                      | X                    |                      |                      |                      | X                    |
| Change front axle fluid (4X4).  |                      | X                    |                      |                      |                      | X                    |
| Change 6-spd manual transmission (G-56) fluid<br>2500/3500 models only.   |                      | X                    |                      |                      |                      |                      |
| Inspect brake linings.  |                      | X                    |                      |                      |                      | X                    |
| Inspect and adjust parking brake if necessary.  |                      | X                    |                      |                      |                      | X                    |
| Drain and refill automatic transmission fluid and<br>change main sump and spin-on cooler return<br>filter (if equipped) (545 RFE only). |                      | X                    |                      |                      |                      |                      |
| Drain and refill automatic transmission fluid.<br>Replace filter and adjust bands (48RE only).  |                      | X                    |                      |                      |                      |                      |

Inspection and service should also be performed anytime a malfunction is observed or suspected. Retain all receipts.

## Schedule “A”

| Miles<br>(Kilometers)<br>[Months]                               | 7,500<br>(12 000)<br>[6] | 15,000<br>(24 000)<br>[12] | 22,500<br>(36 000)<br>[18] | 30,000<br>(48 000)<br>[24] | 37,500<br>(60 000)<br>[30] |
|---|--------------------------|----------------------------|----------------------------|----------------------------|----------------------------|
| Change engine oil and engine oil filter.                        |                          | X                          |                            | X                          |                            |
| Lubricate Front Drive Shaft Fitting (2500/3500, 4X4).           | X                        | X                          | X                          | X                          | X                          |
| Rotate tires.   | X                        | X                          | X                          | X                          | X                          |
| Check spare tire for proper pressure and correct<br>stowage.    | X                        | X                          | X                          | X                          | X                          |
| Lubricate outer tie rod ends 2500/3500 (4X4) models<br>only.    | X                        | X                          | X                          | X                          | X                          |
| Check transfer case fluid level (4X4).                          |                          |                            |                            | X                          |                            |
| Inspect water pump weep hole for blockage                       |                          | X                          |                            | X                          |                            |
| Replace fuel filter element. Clean the water in fuel<br>sensor. |                          | X                          |                            | X                          |                            |
| Inspect drive belts, replace as necessary.                      |                          |                            | X                          |                            |                            |
| Inspect brake linings.  |                          |                            | X                          |                            |                            |
| Inspect and adjust parking brake if necessary.                  |                          |                            | X                          |                            |                            |

| Miles                         | 7,500    | 15,000   | 22,500   | 30,000   | 37,500   |
|-------------------------------|----------|----------|----------|----------|----------|
| (Kilometers)                  | (12 000) | (24 000) | (36 000) | (48 000) | (60 000) |
| [Months]                      | [6]      | [12]     | [18]     | [24]     | [30]     |
| Inspect fan hub.              |          |          |          | X        |          |
| Inspect damper.               |          |          |          | X        |          |
| Inspect front wheel bearings. |          |          |          | X        |          |

| Miles   | 45,000   | 52,500   | 60,000   | 67,500    | 75,000    |
|---|----------|----------|----------|-----------|-----------|
| (Kilometers)  | (72 000) | (84 000) | (96 000) | (108 000) | (120 000) |
| [Months]  | [36]     | [42]     | [48]     | [54]      | [60]      |
| Change engine oil and engine oil filter.  | X        |          | X        |           | X         |
| Lubricate Front Drive Shaft Fitting (2500/3500, 4X4).   | X        | X        | X        | X         | X         |
| Rotate tires.   | X        | X        | X        | X         | X         |
| Check spare tire for proper pressure and correct stowage.                                     | X        | X        | X        | X         | X         |
| Lubricate outer tie rod ends 2500/3500 (4X4) models only.                                     | X        | X        | X        | X         | X         |
| Check transfer case fluid level.  |          |          | X        |           |           |
| Flush and replace engine coolant at 60 months, if not replaced at 102,000 miles (163 000 km). |          |          |          |           | X         |
| Inspect drive belts, replace as necessary.  | X        |          |          | X         |           |
| Inspect water pump weep hole for blockage   | X        |          | X        |           | X         |
| Replace fuel filter element. Clean the water in fuel sensor.                                  | X        |          | X        |           | X         |
| Inspect brake linings.  | X        |          |          | X         |           |
| Inspect and adjust parking brake if necessary.  | X        |          |          | X         |           |
| Inspect fan hub.  |          |          | X        |           |           |
| Inspect damper.   |          |          | X        |           |           |
| Inspect front wheel bearings.   |          |          | X        |           |           |
| Replace fuel filter element. Clean the water in fuel sensor                                   |          |          | X        |           |           |



| Miles<br>(Kilometers)<br>[Months]  | 82,500<br>(132<br>000)<br>[66] | 90,000<br>(144<br>000)<br>[72] | 97,500<br>(156<br>000)<br>[78] | 100,000<br>(160<br>000) | 105,000<br>(168<br>000)<br>[84] |
|--|--------------------------------|--------------------------------|--------------------------------|-------------------------|---------------------------------|
| Change engine oil and engine oil filter.   |                                | X                              |                                |                         | X                               |
| Lubricate Front Drive Shaft Fitting (2500/3500, 4X4).  | X                              | X                              | X                              | X                       | X                               |
| Rotate tires.  | X                              | X                              | X                              | X                       | X                               |
| Check spare tire for proper pressure and correct stowage.                                    | X                              | X                              | X                              | X                       | X                               |
| Lubricate outer tie rod ends 2500/3500 (4X4) models only.                                    | X                              | X                              | X                              | X                       | X                               |
| Flush and replace engine coolant, if not replaced at 60 mos.                                 |                                |                                |                                | X                       |                                 |
| Check transfer case fluid level (4X4).   |                                | X                              |                                |                         |                                 |
| Inspect drive belt, replace as required.   |                                | X                              |                                |                         |                                 |
| Inspect fan hub.   |                                | X                              |                                |                         |                                 |
| Inspect damper.  |                                | X                              |                                |                         |                                 |
| Inspect water pump weep hole for blockage.   |                                | X                              |                                |                         | X                               |
| Replace fuel filter element. Clean the water in fuel sensor.                                 |                                | X                              |                                |                         | X                               |
| Inspect front wheel bearings.  |                                | X                              |                                |                         |                                 |
| Inspect brake linings.   |                                | X                              |                                |                         |                                 |
| Inspect and adjust parking brake if necessary.   |                                | X                              |                                |                         |                                 |
| Drain and refill automatic transmission fluid. Replace filter and adjust bands (48 RE only). |                                |                                |                                | X                       |                                 |

| Miles<br>(Kilometers)<br>[Months]                         | 112,500<br>(181<br>000)<br>[90] | 120,000<br>(193<br>000)<br>[96] | 127,500<br>(205<br>000)<br>[102] | 135,000<br>(217<br>000)<br>[108] | 142,500<br>(229<br>000)<br>[114] | 150,000<br>(241<br>000)<br>[120] |
|---|---------------------------------|---------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|
| Change engine oil and engine oil filter.                  |                                 | X                               |                                  | X                                |                                  | X                                |
| Lubricate Front Drive Shaft Fitting (2500/3500, 4X4).     | X                               | X                               | X                                | X                                | X                                | X                                |
| Rotate tires.   | X                               | X                               | X                                | X                                | X                                | X                                |
| Check spare tire for proper pressure and correct stowage. | X                               | X                               | X                                | X                                | X                                | X                                |

| Miles  | 112,500   | 120,000   | 127,500   | 135,000   | 142,500   | 150,000   |
|--|-----------|-----------|-----------|-----------|-----------|-----------|
| (Kilometers)   | (181 000) | (193 000) | (205 000) | (217 000) | (229 000) | (241 000) |
| [Months]   | [90]      | [96]      | [102]     | [108]     | [114]     | [120]     |
| Lubricate outer tie rod ends 2500/3500 (4X4) models only.                                      | X         | X         | X         | X         | X         | X         |
| Flush and replace engine coolant at 120 months, if not replaced at 100,000 miles (160 000 km). |           |           |           |           | X         |           |
| Inspect drive belt, replace as required.   | X         |           |           | X         |           |           |
| Drain and refill transfer case fluid (4X4).  |           | X         |           |           |           |           |
| Check transfer case fluid level (4X4).   |           |           |           |           |           | X         |
| Inspect fan hub.   |           | X         |           |           | X         |           |
| Inspect damper.  |           | X         |           |           | X         |           |
| Inspect water pump weep hole for blockage.   |           | X         |           | X         | X         |           |
| Replace fuel filter element. Clean the water in fuel sensor.                                   |           | X         |           | X         |           | X         |
| Inspect front wheel bearings.  |           | X         |           |           | X         |           |
| Inspect brake linings.   | X         |           |           | X         |           |           |
| Inspect and adjust parking brake if necessary.   | X         |           |           | X         |           |           |
| Adjust valve lash clearance.   |           |           |           |           |           | X         |

Inspection and service should also be performed anytime a malfunction is observed or suspected. Retain all receipts.

**WARNING:**

- You can be badly injured working on or around a motor vehicle. Do only service work for which you have the knowledge and the right equipment. If you have any doubt about your ability to perform a service job, take your vehicle to a competent mechanic.
- Failure to properly inspect and maintain your vehicle could result in a component malfunction and effect vehicle handling and performance. This could cause an accident

Failure to follow these instructions may result in possible serious or fatal injury.