

AUTOMATIC TRANSMISSION - 48RE (Continued)

(14) Remove oil pump gasket (Fig. 29). Note gasket position in case for assembly reference.

(15) Loosen front band adjusting screw until band is completely loose.

(16) Remove front band strut and anchor (Fig. 30).

(17) Squeeze front band together slightly and slide band over front clutch retainer and out of case (Fig. 31).

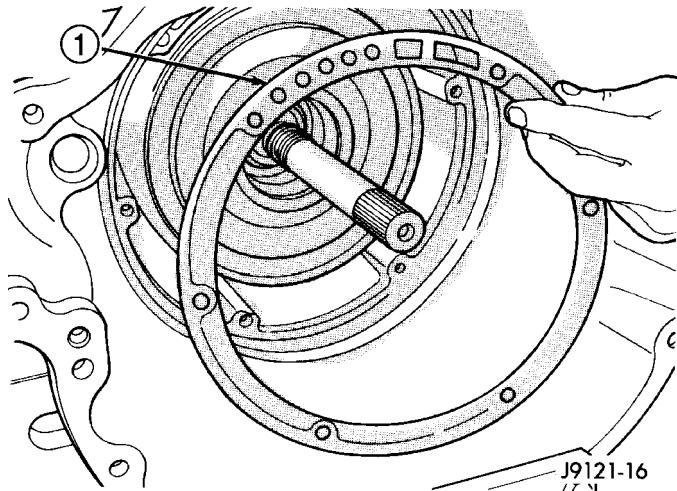


Fig. 29 Oil Pump Gasket

- 1 - OIL PUMP GASKET

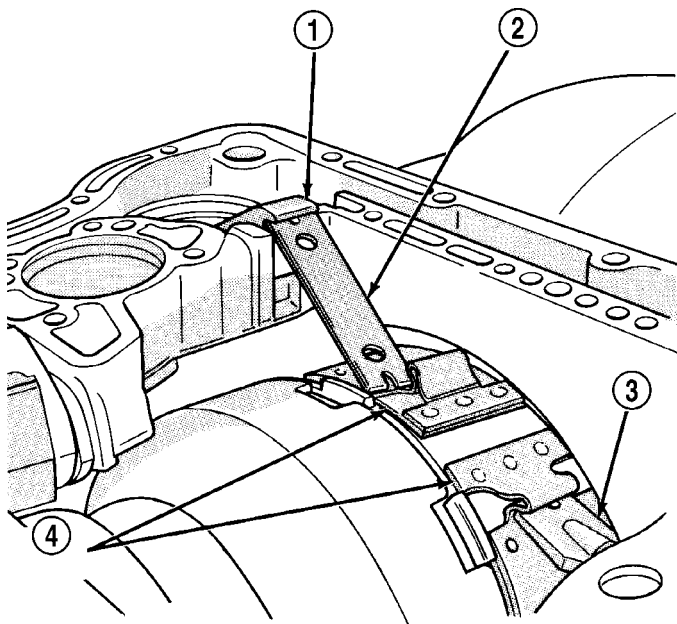


Fig. 30 Front Band Linkage

- 1 - LEVER
- 2 - STRUT
- 3 - ANCHOR
- 4 - FRONT BAND

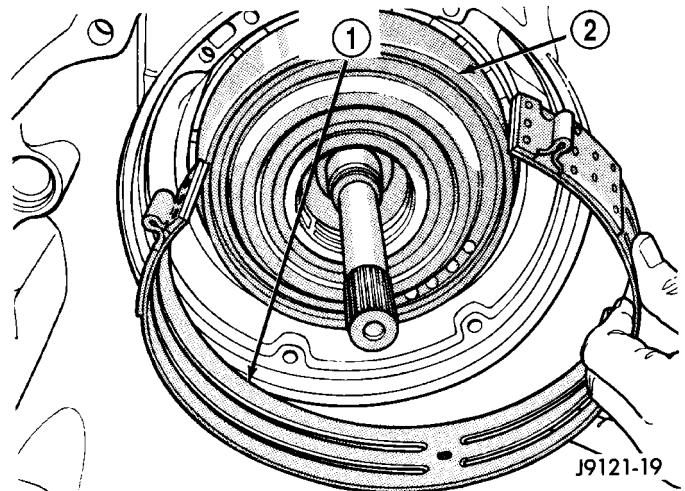


Fig. 31 Front Band Removal

- 1 - FRONT BAND
- 2 - FRONT CLUTCH RETAINER

(18) Remove front and rear clutch assemblies as a unit (Fig. 32).

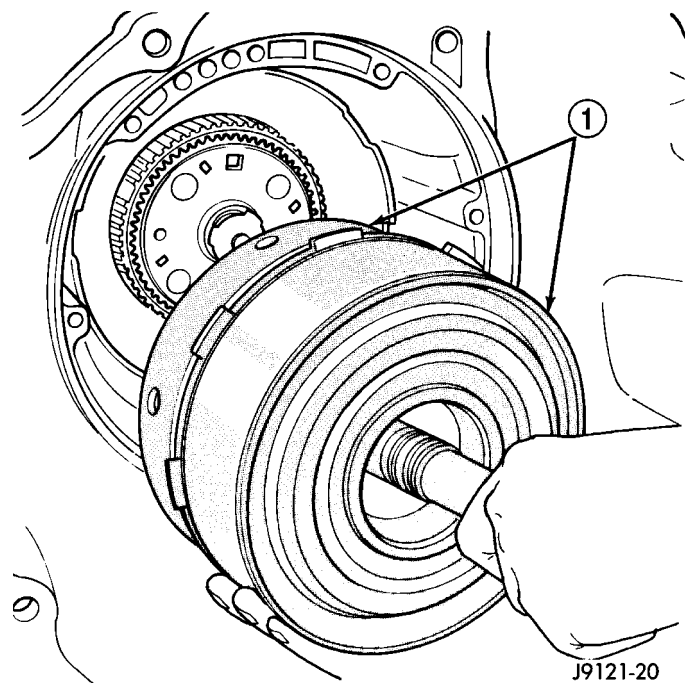


Fig. 32 Removing Front/Rear Clutch Assemblies

- 1 - FRONT AND REAR CLUTCH ASSEMBLIES