

09 - Engine, 6.7L Diesel/Turbocharger System/TURBOCHARGER/Removal


## **REMOVAL**

- 1. Disconnect the negative battery cable on both batteries.
- 2. Disconnect and re-position the right hand side positive battery cable.
- 3. Drain the coolant from the radiator and engine.(Refer to 07 Cooling Standard Procedure)
- 4. Remove the air filter housing. (Refer to 09 Engine/ Air Intake System/AIR CLEANER - Removal)
- 5. Disconnect the crankcase vent hose at the turbocharger air intake.
- 6. Remove the intake air tube at the turbocharger (5).
- 7. Remove the charge air cooler inlet tube at the turbocharger inlet (4).
- 8. Disconnect the turbocharger speed sensor electrical connector.
- 9. Disconnect the turbocharger actuator electrical connector (6).
- 10. Remove the turbocharger oil pressure line (3).
- 11. Remove the turbocharger coolant lines at the engine block and turbocharger.
- 12. Remove the viscous fan and fan shroud, (Refer to 07 Cooling/Engine/FAN, Cooling Removal).
- 13. Remove the right side wheelhouse splash shield, (Refer to 23 Body/Exterior/SHIELD, Splash Removal).
- 14. Lower the vehicle.
- 15. Install the engine support fixture tool 8534B (1).
- Remove the right hand side engine mount, (Refer to 09 - Engine/Engine Mounting/INSULATOR, Engine Mount - Removal).

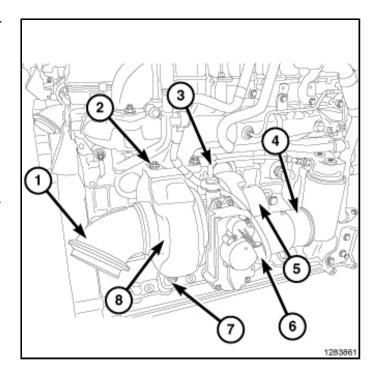

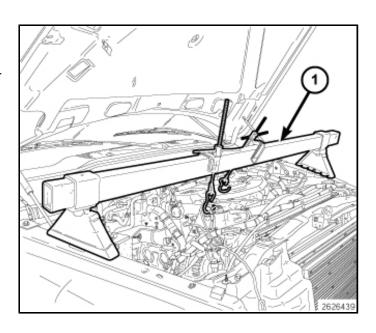

- 17. Raise and support the vehicle.
- 18. Remove the exhaust steady rest bracket from transmission.
- 19. Remove the V-clamp (1) from the turbocharger exhaust outlet.

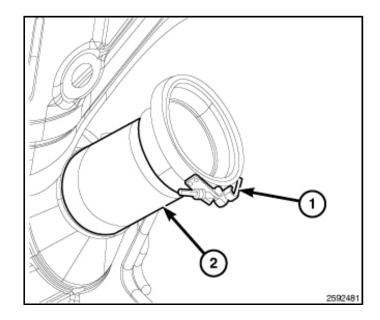

- 20. Remove the turbocharger drain tube (2) at the turbocharger (1).
- 21. Remove the turbocharger drain tube from the cylinder block.
- 22. Lower the vehicle.
- 23. Remove and re-position the grid heater relay from the battery tray.
- 24. Using Tool 9866, remove the turbocharger to exhaust manifold mounting nuts.
- 25. Remove the turbocharger (1) from the vehicle by lifting from the top of the engine compartment.
- 26. Clean the turbocharger mating surfaces.
- Inspect the turbocharger for damage, if necessary replace the turbocharger, (Refer to 09 - Engine/ Turbocharger System/TURBOCHARGER -Inspection).

