 
 

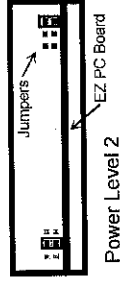


## Fueling Adjustment

The *Power Edge EZ Module* features 4 different levels of fueling. The *Power Edge EZ Module* is set default to level 3.

1. To change settings remove the front panel by using an allen wrench to remove the two screws.
2. Below the cover the 3 jumper settings on the right side are used for the power level adjustment.
3. This jumper can be removed and repositioned in any of the locations to achieve the desired response as shown below.

**Note:** Jumper settings on the left side of the board are for storage only.

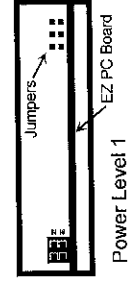

## Power Gains

The following power gains are representative of an actual test vehicle. Power gains may vary somewhat on a different vehicle or in different geographic settings.

	Horsepower Torque
Level 1:	40 150
Level 2:	50 180
Level 3:	60 200
Level 4:	70 220